 


Berker - Light controls


	Page
switching	3
dimming	6
Light signals	7

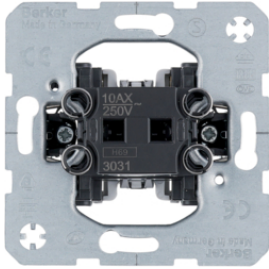

3031

Rocker switch insert


Description	Pack qty.	Art No.
rocker switc on/off Module insert	10	3031
Change-over switch 10AX 250V~	10	3036
rocker switc intermediate Module insert	10	3037
SWITCH FOR INSERTS	10	303212
MOD-EINS WIPPSCHALTER M RD TR 10AX 250V~	10	303601
Change-over switch for installation in h	10	303650
Change-over switch for installation in h	10	613036
Rocker switch w/ground terminal contact	10	52303213

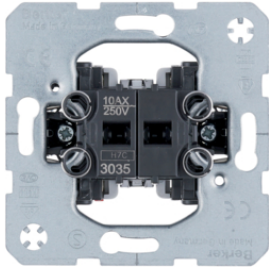 

3035

2-Rockers switch insert


Description	Pack qty.	Art No.
Rockers switch Module inserts	10	3035
Series switch for installation in hollow	10	303550

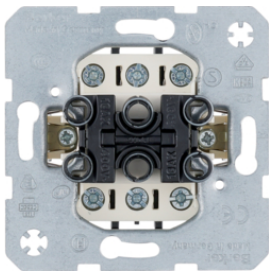 

633023

3-Rockers switch insert


Description	Pack qty.	Art No.
Rockers switch Module inserts	10	633023

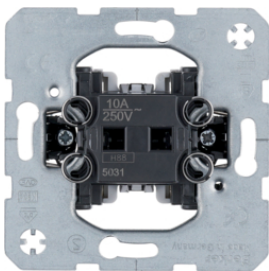 

5031

Rocker push button insert

Description	Pack qty.	Art No.
Rocker push-butto NO contact Module ins	10	5031
Rocker push-button Module inserts	10	5036
Rocker push-button Module inserts	10	503101
Push-button, NO contact for installation	10	503150
MOMENTARY CONTACT SWITCH	10	503203

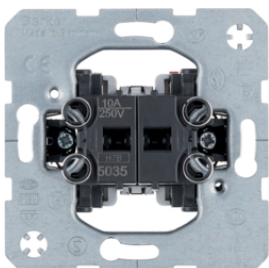 


5035

2-Rockers push button insert

Description	Pack qty.	Art No.
Rockers push-button Module inserts	10	5035
Group rockers push-butto 4 NO, common i	10	503404
Rockers push-button Module inserts	10	503501
Rockers push-button for blind 1pole Mod	10	503520
Rockers push-button Module inserts	10	503808

Pullcord switch


Description	Pack qty.	Art No.
PULLCORD SWITCH	10	3966
PULLCORD CHANGE-OVER SW.	10	390640
PULLC.PUSHB.SW.M2 PW	10	395619

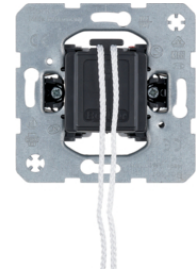 

3966

Key switch

Description	Pack qty.	Art No.
KEY SWITCH	10	382210
KEY SWITCH CHANGE-OVER	10	382610
KEY SWITCH 1POLE	10	383110
KEY SWITCH 2POLE	10	383210

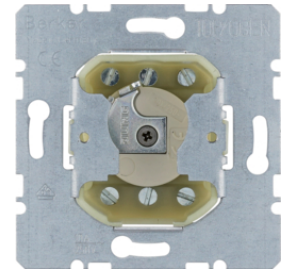 

382210

Hotel Card switch


Description	Pack qty.	Art No.
COVER F. CARD SW. TP PW	10	164109
COVER F.HOTEL SW. TP BLAC	10	164165



164109

Push button insert for HotelCard

Description	Pack qty.	Art No.
MODUL-EINSÄTZE WIPPTASTER MIT 1 BETÄTL..	10	5051
PUSH-BUTTON SWITCH HOTELC	10	5056
PB insert f. hotel card switch 10A, NO	10	505101
Switch push button for hotelcard	10	505102
PB insert for hotel card switch 2A, NO	10	505103
PB insert hotel card switch 2A, NO, NC	10	505201
MODUL-EINSÄTZE WIPPTASTER MIT 1 BETÄTL..	10	505203
PB insert hotel card switch 2A, ch.-over	10	505601

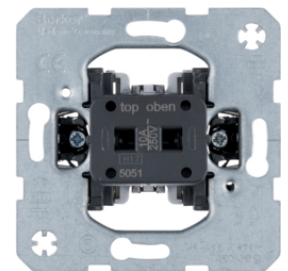 

5051

Mechanical time switch

Description	Pack qty.	Art No.
INSERT TIMER 15 MIN.	1	2040
INSERT TIMER 120 MIN.	1	2041



2040





1600

Glow and neon lamp units

Description	Pack qty.	Art No.
NEON LAMP UNIT	10	1600
Neonlamp unit w/N-terminal, 230V/1m -grey	10	1675
GLOW LAMP UNIT 6 V	10	1676
Neon lamp unit Module inserts grey	10	160002
NEON LAMP UNIT 220V/0.4MA	10	160514
GMAG 230V/0,4MA ORA	10	167504
GLOW LAMP UNIT 6 V	10	167601
GLOW LAMP UNIT 6 V	10	167602
GLOW LAMP UNIT 6 V	10	167603



1680

LED units

Description	Pack qty.	Art No.
Series LED unit with N terminal	1	1680
LED GLAG 230V 1MA	10	1686
LED GLAG 12V-48V 0.2 – 0.9MA	10	1687
LED GLAG 230V 0.40MA	10	168601



1849

Accessories

Description	Pack qty.	Art No.
SCHUTZABDECKUNG	10	1849


Universal power booster (RMD)

Description	Pack qty.	Art No.
UNI-LZ REG P	1	1659901



 1659901



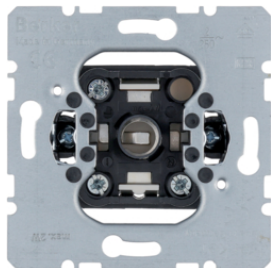

5101

Push button for light signal

Description	Pack qty.	Art No.
P/button and pilot lamp E10 inserts	10	5101
FLUSH MOM.CONT.SW./P.LAMP	10	510110



1601

Incandescent, neon and LED lamps

Description	Pack qty.	Art No.
NEON LAMP BULB E10 220V	100	1601
LED Lamp E10 White	60	1678
LED Lamp E14 White	20	1679
Incandescent lamp E14 Accessories	100	161003
INCANDESCENT LAMP E14	100	161013
LED-LEUCHTMITTEL E10 ROT	10	167801
LED-LEUCHTMITTEL E10 GELB	10	167802
LED-LEUCHTMITTEL E10 GRÜN	10	167803
LED-LEUCHTMITTEL E10 BLAU	10	167804
LED-LEUCHTMITTEL E14 ROT	10	167901
LED-LEUCHTMITTEL E14 GELB	10	167902
LED-LEUCHTMITTEL E14 GRÜN	10	167903
LED-LEUCHTMITTEL E14 BLAU	10	167904
Pilot lamp E14 Module inserts	10	513102



1220

Accessories

Description	Pack qty.	Art No.
Clear transp. cover for pilot lamp E14	10	1220
LENS PILOT LAMP E14 CLEAR	10	1230
LENS PILOT LAMP E14 RED	10	1231
LENS PILOT LAMP E14 GREEN	10	1232
BUTTON F. 5101, RED	10	1279
Clear transp. cover for pilot lamp E10	10	1280
LENS F.PILOT LAMP E10 RED	10	1281
LENS F.PILOT LAMPE10YELLO	10	1282
LENS F.PILOT LAMPE10GREEN	10	1283
SCREEN TPR RED	10	1289