

# HRC fuse carriers

Fuse carriers allow to protect and control circuits against overloads and short circuits.





LS401

**1 pole**

Description	Pack qty.	Art No.
Fuse carrier 1P 25A L31 1M	12	LS401
Fuse carrier 2P 25A L31 2M	6	LS402
Fuse carrier 3P 25A L31 3M	4	LS403
Fuse carrier 3P+N 25A L31 4M	3	LS404
Fuse carrier 1P+N 25A L31 2M	6	LS412
Fuse carrier 1P 25A L31 signal light 1M	12	LS431



LS501

**2 pole**

Description	Pack qty.	Art No.
Fuse carrier 1P 32A L38 1M	12	LS501
Fuse carrier 2P 32A L38 2M	6	LS502
Fuse carrier 3P 32A L38 3M	4	LS503
Fuse carrier 3P+N 32A L38 4M	3	LS504
Fuse carrier 1N 32A L38 1M	12	LS509
Fuse carrier 1P+N 32A L38 2M	6	LS512
Fuse carrier 1P 32A L38 signal light 1M	12	LS531
Fuse carrier 1P+N 32A L38 1M	12	LS600



LS601

**3 pole**

Description	Pack qty.	Art No.
Fuse carrier 1P 50A L51 acc. 1.5M	1	LS601
Fuse carrier 2P 50A L51 acc. 3M	1	LS602
Fuse carrier 3P 50A L51 acc. 4.5M	1	LS603
Fuse carrier 3P+N 50A L51 acc. 6M	1	LS604
Fuse carrier 1P+N 50A L51 acc. 3M	1	LS612
Fuse carrier 1P 50A L51 1.5M	10	LR601
Fuse carrier 2P 50A L51 3M	5	LR602
Fuse carrier 3P 50A L51 4.5M	3	LR603
Fuse carrier 3P+N 50A L51 6M	2	LR604
Fuse carrier 1P+N 50A L51 3M	5	LR612



LS701

**4 pole**

Description	Pack qty.	Art No.
Fuse carrier 1P 125A L58 acc. 2M	1	LS701
Fuse carrier 2P 125A L58 acc. 4M	1	LS702
Fuse carrier 3P 125A L58 acc. 6M	1	LS703
Fuse carrier 3P+N 125A L58 acc. 8M	1	LS704
Fuse carrier 1P+N 125A L58 acc. 4M	1	LS712
Fuse carrier 1P 125A L58 2M	6	LR701
Fuse carrier 2P 125A L58 4M	3	LR702
Fuse carrier 3P 125A L58 6M	2	LR703
Fuse carrier 3P+N 125A L58 8M	1	LR704
Fuse carrier 1P+N 125A L58 4M	3	LR712



LS670

**Accessories**

Description	Pack qty.	Art No.
Microswitch 1P for fuse carrier L51	1	LS670
Microswitch 3P for fuse carrier L51	1	LS671
Microswitch 1P for fuse carrier L58	1	LS770
Microswitch 3P for fuse carrier L58	1	LS771

**Signal lights 230 V**

Description	Pack qty.	Art No.
Signal light 230V fuse carrier L51/L58	1	<b>LS672</b>



LS672