

# Changeover switches


|                                            | <b>Page</b> |
|--------------------------------------------|-------------|
| Manual changeover switches 20 to 125A      | 3           |
| Manual changeover switches 125 to 1600A    | 5           |
| Motorized changeover switches 20 to 160A   | 7           |
| Motorized changeover switches 125 to 1600A | 9           |



HIM402

## Manual changeover switches visual breaking
 
| Description                      | Pack qty. | Art No.       |
|----------------------------------|-----------|---------------|
| Modular change-over switch 4x20A | 1         | <b>HIM402</b> |
| Modular change-over switch 4x40A | 1         | <b>HIM404</b> |
| Modular change-over switch 4x63A | 1         | <b>HIM406</b> |
| Modular change-over switch 4x80A | 1         | <b>HIM408</b> |
| Modular change-over switch 3x20A | 1         | <b>HIM302</b> |
| Modular change-over switch 3x40A | 1         | <b>HIM304</b> |
| Modular change-over switch 3x63A | 1         | <b>HIM306</b> |
| Modular change-over switch 3x80A | 1         | <b>HIM308</b> |

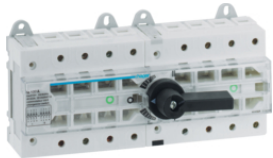

HI405R

## Manual changeover switches visual breaking

| Description                     | Pack qty. | Art No.       |
|---------------------------------|-----------|---------------|
| Modular change-over switch 100A | 1         | <b>HI405R</b> |
| Modular change-over switch 125A | 1         | <b>HI406R</b> |
| Modular change-over switch 63A  | 1         | <b>HI403R</b> |
| Modular change-over switch 80A  | 1         | <b>HI404R</b> |



HZC016

## External handles for HIM 20 to 80A

| Description            | Pack qty. | Art No.       |
|------------------------|-----------|---------------|
| Grey handle COS 20-80A | 1         | <b>HZC016</b> |



HZI004

## External handles for HI 100 to 125A

| Description                         | Pack qty. | Art No.       |
|-------------------------------------|-----------|---------------|
| Black handle FCS- LBS 63-125A 3pos. | 1         | <b>HZI004</b> |
| Black handle FCS- LBS 63-125A 1pos. | 1         | <b>HZI001</b> |



HZC112

## Shaft extensions for HIM 20 to 80A

| Description                           | Pack qty. | Art No.       |
|---------------------------------------|-----------|---------------|
| Shaft extension N°5 200mm LBS 20-125A | 1         | <b>HZC112</b> |
| Shaft extension N°5 320mm LBS 20-125A | 1         | <b>HZC113</b> |

**Shaft extensions for HI 100 to 125A**


| Description                            | Pack qty. | Art No.       |
|----------------------------------------|-----------|---------------|
| Shaft extension 200 mm FCS-LBS 80-250A | 1         | <b>HZC103</b> |
| Shaft extension 320 mm FCS-LBS 80-250A | 1         | <b>HZC104</b> |



HZC103

**Insulated busbar**
 
| Description                              | Pack qty. | Art No.       |
|------------------------------------------|-----------|---------------|
| Insulated busbar HI63/125                | 1         | <b>HZ156R</b> |
| Barre de pontage 3P pour Commut 20-40A H | 1         | <b>HZC706</b> |
| Barre de pontage 4P pour Commut 20-40A H | 1         | <b>HZC707</b> |
| Barre de pontage 3P pour Commut 63-80A H | 1         | <b>HZC708</b> |
| Barre de pontage 4P pour Commut 63-80A H | 1         | <b>HZC709</b> |

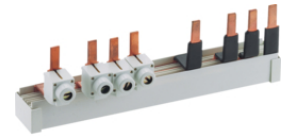

HZ156R

**Auxiliary contacts**

| Description                         | Pack qty. | Art No.       |
|-------------------------------------|-----------|---------------|
| Auxiliary contact 1C+1O LBS 20-160A | 1         | <b>HZC311</b> |
| Auxiliary contact 1C+1O HI63/125    | 1         | <b>HZ160R</b> |
| Auxiliary contact 2C LBS 20-160A    | 1         | <b>HZC312</b> |




HZC311

**Terminal shrouds**

| Description                     | Pack qty. | Art No.       |
|---------------------------------|-----------|---------------|
| Terminal shrouds 4P LBS 20-63A  | 1         | <b>HZC212</b> |
| Terminal shrouds 4P LBS 63-100A | 1         | <b>HZC214</b> |
| Terminal shrouds 3P LBS 20-63A  | 1         | <b>HZC211</b> |
| Terminal shrouds 3P LBS 63-100A | 1         | <b>HZC213</b> |



 HZC212

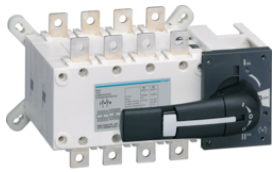

HI452

## Manual changeover switches 4 pole


| Description                 | Pack qty. | Art No.      |
|-----------------------------|-----------|--------------|
| Change-over switch 4P 160A  | 1         | <b>HI452</b> |
| Change-over switch 4P 250A  | 1         | <b>HI454</b> |
| Change-over switch 4P 400A  | 1         | <b>HI456</b> |
| Change-over switch 4P 630A  | 1         | <b>HI458</b> |
| Change-over switch 4P 800A  | 1         | <b>HI460</b> |
| Change-over switch 4P 1250A | 1         | <b>HI462</b> |
| Change-over switch 4P 1600A | 1         | <b>HI464</b> |
| Change-over switch 4P 125A  | 1         | <b>HI451</b> |



HZI002

## External handles
 
| Description                     | Pack qty. | Art No.       |
|---------------------------------|-----------|---------------|
| Black handle FCS- LBS 125-630A  | 1         | <b>HZI002</b> |
| Black handle FCS- LBS 800-1600A | 1         | <b>HZI003</b> |



HZC101

## Shaft extensions

| Description                              | Pack qty. | Art No.       |
|------------------------------------------|-----------|---------------|
| Shaft extension 200 mm FCS-LBS 63-630A   | 1         | <b>HZC101</b> |
| Shaft extension 320 mm FCS-LBS 63-630A   | 1         | <b>HZC102</b> |
| Shaft extension 200 mm FCS-LBS 800-1800A | 1         | <b>HZC105</b> |
| Shaft extension 320 mm FCS-LBS 800-1800A | 1         | <b>HZC106</b> |



HZ160

## Auxiliary contacts

| Description               | Pack qty. | Art No.      |
|---------------------------|-----------|--------------|
| Auxiliary contact 1NO+1NC | 1         | <b>HZ160</b> |




HZC202

## Terminal shrouds

| Description                      | Pack qty. | Art No.       |
|----------------------------------|-----------|---------------|
| Terminal shrouds 4P LBS 125-200A | 1         | <b>HZC202</b> |
| Terminal shrouds 4P LBS 200-400A | 1         | <b>HZC204</b> |
| Terminal shrouds 4P LBS 400-630A | 1         | <b>HZC206</b> |

**Terminal covers**
 
| Description                  | Pack qty. | Art No.       |
|------------------------------|-----------|---------------|
| Terminals cover 800/1250A 4P | 1         | <b>HZ1204</b> |
| Terminals cover 1600A 4P     | 1         | <b>HZ1205</b> |

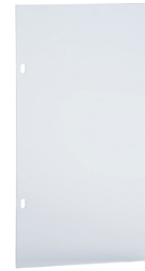

HZ1204

**busbars**

| Description      | Pack qty. | Art No.      |
|------------------|-----------|--------------|
| BUSBAR 125/160A  | 1         | <b>HZ156</b> |
| BUSBAR 250A      | 1         | <b>HZ157</b> |
| BUSBAR 400A      | 1         | <b>HZ158</b> |
| BUSBAR 630A      | 1         | <b>HZ159</b> |
| BUSBAR FOR HI460 | 1         | <b>HZ162</b> |
| BUSBAR FOR HI462 | 1         | <b>HZ163</b> |
| BUSBAR FOR HI464 | 1         | <b>HZ164</b> |



HZ156



## Motorized changeover switches 4 pole

| Description                              | Pack qty. | Art No.        |
|------------------------------------------|-----------|----------------|
| Motorized changeover switch 4P 63A 400V  | 1         | <b>HIC406A</b> |
| Motorized changeover switch 4P 80A 400V  | 1         | <b>HIC408A</b> |
| Motorized changeover switch 4P 100A 400V | 1         | <b>HIC410A</b> |
| Motorized changeover switch 4P 125A 400V | 1         | <b>HIC412A</b> |
| Motorized changeover switch 4P 160A 400V | 1         | <b>HIC416A</b> |

HIC406A



## Auxiliary contact

| Description                     | Pack qty. | Art No.       |
|---------------------------------|-----------|---------------|
| Auxiliary contact 10+1F 20-160A | 1         | <b>HZI300</b> |


HZI300



## Single phase voltage sensing tap

| Description                      | Pack qty. | Art No.       |
|----------------------------------|-----------|---------------|
| Single phase voltage sensing tap | 1         | <b>HZI230</b> |

 HZI230

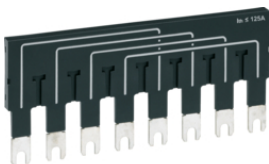

## Bridging bars

| Description               | Pack qty. | Art No.       |
|---------------------------|-----------|---------------|
| Bridging bar 2x4P 63-125A | 1         | <b>HZI400</b> |
| Bridging bar 2x4P 160A    | 1         | <b>HZI401</b> |

HZI400



## Terminal shrouds

| Description                      | Pack qty. | Art No.       |
|----------------------------------|-----------|---------------|
| Terminal shrouds 4P LBS 100-160A | 1         | <b>HZC218</b> |

HZC218

**Sealable cover**

| Description    | Pack<br>qty. | Art No.       |
|----------------|--------------|---------------|
| Sealable cover | 1            | <b>HZI210</b> |



HZI210





HZ157

## Bridging bars

| Description      | Pack qty. | Art No.      |
|------------------|-----------|--------------|
| BUSBAR 250A      | 1         | <b>HZ157</b> |
| BUSBAR 400A      | 1         | <b>HZ158</b> |
| BUSBAR 630A      | 1         | <b>HZ159</b> |
| BUSBAR 125/160A  | 1         | <b>HZ156</b> |
| BUSBAR FOR HI460 | 1         | <b>HZ162</b> |
| BUSBAR FOR HI462 | 1         | <b>HZ163</b> |
| BUSBAR FOR HI464 | 1         | <b>HZ164</b> |



HZC204

## Terminal shrouds

| Description                      | Pack qty. | Art No.       |
|----------------------------------|-----------|---------------|
| Terminal shrouds 4P LBS 200-400A | 1         | <b>HZC204</b> |
| Terminal shrouds 4P LBS 400-630A | 1         | <b>HZC206</b> |
| Terminal shrouds 4P LBS 125-200A | 1         | <b>HZC202</b> |



HZI202

## Terminal cover

| Description                  | Pack qty. | Art No.       |
|------------------------------|-----------|---------------|
| Terminals cover 250/400A 4P  | 1         | <b>HZI202</b> |
| Terminals cover 630A 4P      | 1         | <b>HZI203</b> |
| Terminals cover 800/1250A 4P | 1         | <b>HZI204</b> |
| Terminals cover 1600A 4P     | 1         | <b>HZI205</b> |
| Terminals cover 125/160A 4P  | 1         | <b>HZI201</b> |



HZI811

## Automatic transfer relay

| Description | Pack qty. | Art No.       |
|-------------|-----------|---------------|
| Controller  | 1         | <b>HZI811</b> |



HZI910

## Remotes

| Description      | Pack qty. | Art No.       |
|------------------|-----------|---------------|
| Remote interface | 1         | <b>HZI910</b> |
| Remote interface | 1         | <b>HZI911</b> |

**Double automatic transfer relay**

| Description         | Pack<br>qty. | Art No.       |
|---------------------|--------------|---------------|
| Double power supply | 1            | <b>HZI812</b> |



HZI812