

# Circuit breakers

	<b>Page</b>
Circuit breakers	3
HRC fuse carriers	4



L12401

**Ph/N circuit breakers without indicator**

Description	Pack qty.	Art No.
FUSE CARRIER 10A 250V SP&N	12	<b>L12401</b>
FUSE CARRIER 16A 250V SP&N	12	<b>L12501</b>
Fuse carrier 1P+N 20A 1M	12	<b>L12601</b>
FUSE CARRIER 25A 400V SP&N	12	<b>L12701</b>
Fuse carrier 1P+N 32A 1M	12	<b>L12801</b>



L325

**Ph/N circuit breakers with indicator**

Description	Pack qty.	Art No.
Fuse carrier 1P+N 10A signal light 1M	12	<b>L32401</b>
Fuse carrier 1P+N 16A signal light 1M	12	<b>L32501</b>



LF139

**Fuse-cartridge type B**


Description	Pack qty.	Art No.
Cartridge fuse 16A - 10.3x25.8mm	10	<b>LF139</b>
Cartridge fuse 20A - 8.5x31.5mm	10	<b>LF140</b>
Cartridge fuse 25A - 10.3x31.5mm	10	<b>LF141</b>
Cartridge fuse 32A - 10.3x38mm	10	<b>LF142</b>



L14700

**Spare fuse-cartridge**

Description	Pack qty.	Art No.
Spare cartridge fuses box	10	<b>L14700</b>

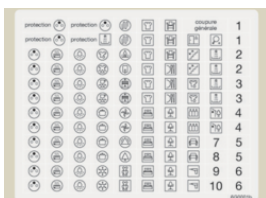

L051

**Labels for circuit identification**

Description	Pack qty.	Art No.
Labels for circuit indication	10	<b>L05100</b>

### L31

Description	Pack qty.	Art No.
Fuse carrier 1P 25A L31 1M	12	<b>LS401</b>
Fuse carrier 1P 25A L31 signal light 1M	12	<b>LS431</b>
Fuse carrier 1P+N 25A L31 2M	6	<b>LS412</b>
Fuse carrier 1P+N 20A L31 1M	12	<b>L40600</b>
Fuse carrier 2P 25A L31 2M	6	<b>LS402</b>
Fuse carrier 3P 25A L31 3M	4	<b>LS403</b>
Fuse carrier 3P+N 25A L31 4M	3	<b>LS404</b>



LS401

### L38

Description	Pack qty.	Art No.
Fuse carrier 1P 32A L38 1M	12	<b>LS501</b>
Fuse carrier 1N 32A L38 1M	12	<b>LS509</b>
Fuse carrier 1P 32A L38 signal light 1M	12	<b>LS531</b>
Fuse carrier 1P+N 32A L38 2M	6	<b>LS512</b>
Fuse carrier 1P+N 32A L38 sign. light 1M	12	<b>L53201</b>
Fuse carrier 1P+N 32A L38 1M	12	<b>L50600</b>
Fuse carrier 2P 32A L38 2M	6	<b>LS502</b>
Fuse carrier 3P 32A L38 3M	4	<b>LS503</b>
Fuse carrier 3P+N 32A L38 4M	3	<b>LS504</b>



LS501

### L51

Description	Pack qty.	Art No.
Fuse carrier 1P 50A L51 acc. 1.5M	1	<b>LS601</b>
Fuse carrier 1P 50A L51 1.5M	10	<b>LR601</b>
Fuse carrier 1P+N 50A L51 acc. 3M	1	<b>LS612</b>
Fuse carrier 1P+N 50A L51 3M	5	<b>LR612</b>
Fuse carrier 2P 50A L51 acc. 3M	1	<b>LS602</b>
Fuse carrier 2P 50A L51 3M	5	<b>LR602</b>
Fuse carrier 3P 50A L51 acc. 4.5M	1	<b>LS603</b>
Fuse carrier 3P 50A L51 4.5M	3	<b>LR603</b>
Fuse carrier 3P+N 50A L51 acc. 6M	1	<b>LS604</b>
Fuse carrier 3P+N 50A L51 6M	2	<b>LR604</b>



LS601

### L58

Description	Pack qty.	Art No.
Fuse carrier 1P 125A L58 acc. 2M	1	<b>LS701</b>
Fuse carrier 1P 125A L58 2M	6	<b>LR701</b>
Fuse carrier 1P+N 125A L58 acc. 4M	1	<b>LS712</b>
Fuse carrier 1P+N 125A L58 4M	3	<b>LR712</b>
Fuse carrier 2P 125A L58 acc. 4M	1	<b>LS702</b>
Fuse carrier 2P 125A L58 4M	3	<b>LR702</b>
Fuse carrier 3P 125A L58 acc. 6M	1	<b>LS703</b>
Fuse carrier 3P 125A L58 6M	2	<b>LR703</b>
Fuse carrier 3P+N 125A L58 acc. 8M	1	<b>LS704</b>
Fuse carrier 3P+N 125A L58 8M	1	<b>LR704</b>



LS701

### Microswitches

Description	Pack qty.	Art No.
Microswitch 1P for fuse carrier L51	1	<b>LS670</b>
Microswitch 3P for fuse carrier L51	1	<b>LS671</b>
Microswitch 1P for fuse carrier L58	1	<b>LS770</b>
Microswitch 3P for fuse carrier L58	1	<b>LS771</b>



LS670



LS672

**Signal lights 230 V**

Description	Pack qty.	Art No.
Signal light 230V fuse carrier L51/L58	1	<b>LS672</b>